


DETACH FROM TRUCK GEOTAB



Start by selecting your truck number in the box under ELD info.

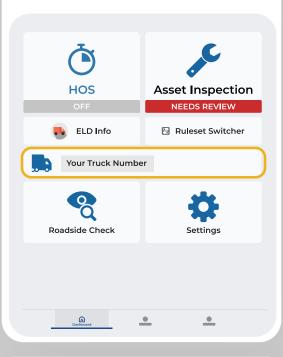

The last step will be to press No Vehicle at the bottom of the screen. This device's GPS functionality may not be enabled, or the GPS signal may be weak.

No vehicle



You will see no vehicle on the dashboard screen - be sure you are detached from the truck on all devices, including your personal devices. HOS **Asset Inspection** NO VEHICLE ELD Info Ruleset Switcher

No vehicle