

HOW TO ADJUST YOUR BRAKES

Tractor & Trailer

1 TO CALIBRATE YOUR TRACTOR & TRAILER BRAKES TOGETHER

Before you start your shift and occasionally as you come to a stop during the day, **fully depress the foot valve** (at least 50 psi application) **and HOLD for 5 seconds**. Listen for air leaks and watch the gauge.

Repeat three to four times.

2 TO CALIBRATE YOUR TRACTOR BRAKES

Set your **TRAILER brakes** (Red Button Out). Do not set your Tractor Brakes (Yellow Button In). **Fully Depress the foot valve** (at least 50 psi application) **and HOLD for 5 seconds**. Listen for air leaks and watch the gauge.

Repeat three or four times.

3 TO CALIBRATE YOUR TRACTOR & TRAILER BRAKES TOGETHER

Set your **TRACTOR brakes** (Yellow Button Out). Do not set your Trailer Brakes (Red Button In). **With trailer air-lines connected, fully depress the Trolley valve or foot valve** (at least 50 psi application) **and HOLD for 5 seconds**. Listen for air leaks and watch the gauge.

Repeat three or four times.

